

SEITAL SEPARATION TECHNOLOGY - SEPARATORS, CLARIFIERS

Separation in the Dairy Industry



Efficient and cost-effective separation and clarification

Current and evolving customer needs always come first at Seital Separation Technology. Via close collaboration with our customers, an innovative approach and cutting-edge R&D we design, develop and deliver best-in-class separation solutions for the dairy industry that provide superior quality and yield at the lowest possible cost.

| Features | Benefits |
|---|--|
| ▪ Simple mechanical design and construction, easy to maintain | ▪ Low maintenance time and cost |
| ▪ Skidded solution | ▪ Short installation time and cost savings |
| ▪ Remote monitoring | ▪ Higher uptime, on-time operational diagnostics |
| ▪ Wide range of models | ▪ Low investment needed |
| ▪ Low-noise | ▪ Improvement in operator's working conditions |
| ▪ Hygienic fluid handling while processing | ▪ Low contamination risk |

Applications

Warm milk skimming

Milk skimming during pasteurisation is the most common centrifugal separator application in dairies. The purpose of the skimming process is to separate the raw milk into skim milk and cream. The product temperature should normally be kept between 45°C and 55°C (113 and 131°F) in order to ensure optimal skimming efficiency. Skimming efficiency is influenced by the transport of whole milk, milk storage temperature and time, seasonal variation, milk quality, mechanical treatment and free air-content upstream from the separator.

Skimming efficiency is expressed as residual fat content in the skimmed milk. At rated capacity, Seital separators generally give a residual fat content in the range of:

- 0.03 - 0.05% measured by Gerber method
- 0.040 - 0.055% measured by Röse-Gottlieb method



Dairy - Milk separator with automatic milk and cream standardization system

Self-cleaning warm milk separators

| MODELS | SKIMMING CAPACITY l/h (Gal/h) | STANDARDISATION CAPACITY l/h (Gal/h) | MOTOR POWER kW (HP) |
|--------|-------------------------------|--------------------------------------|---------------------|
| SE12A | 1,200 (317) | 2,000 (528) | 4 (5) |
| SE13 | 2,000 (528) | 3,000 (793) | 5.5 (7) |
| SE15 | 3,500 (925) | 5,000 (1320) | 7.5 (10) |
| SE20 | 5,000 (1320) | 8,000 (2113) | 11 (15) |
| SE30A | 7,000 (1849) | 10,500 (2774) | 15 (20) |
| SE35 | 10,000 (2642) | 14,000 (3698) | 18.5 (25) |
| SE40 | 12,000 (3170) | 18,000 (4755) | 18.5/22 (25/30) |
| SE45 | 15,000 (3963) | 20,000 (5283) | 22 (30) |
| SE50 | 17,000 (4491) | 25,000 (6604) | 30 (40) |
| SE60 | 20,000 (5283) | 30,000 (7925) | 30 (40) |
| SE70 | 25,000 (6604) | 35,000 (9246) | 37 (50) |
| SE75 | 30,000 (7925) | 40,000 (10567) | 37/45 (50/) |
| SE75S | 35,000 (9246) | 45,000 (11888) | 45 (60) |
| SE80 | 40,000 (10567) | 48,000 (12680) | 45 (60) |
| SE85 | 45,000 (11888) | 52,000 (13737) | 45/55 (60/74) |

Cold milk skimming

Cold milk separation at > 4 °C (39.2 °F) takes place in a number of processes including:

- cheese making process using unpasteurised milk
- pre-standardisation process (avoiding double heating treatment)
- high-quality cream production.

Cold milk separation enables significant savings in energy and thermal equipment such as heat exchangers. Cold milk skimming efficiency is lower than for warm milk, and cream concentration cannot exceed 40-42 %. Skimming efficiency improves by increasing temperature and/or reducing flow-rate. Viscosity and other cream characteristics at low temperature require the use of a special hermetic separator.

Milk clarification

In many cases milk must be clarified on reception of the dairy to remove particules of dirt and somatic cells such as Leucocyte. This will reduce the presence of Listeria which is trapped inside the leucocyte.


The milk clarifier can operate with cold or warm milk. However, clarification efficiency improves at higher temperatures.

Centrifuges for milk separation (skimming) also perform clarification, but their efficiency is low compared with milk clarifiers.

Self-cleaning cold milk separators

| MODELS | SKIMMING CAPACITY l/h (Gal/h) | | MOTOR POWER kW (hp) |
|--------|-------------------------------|---------------|---------------------|
| | *rf<0.10% | *rf<0.25% | |
| SE20HF | 2,000 (528) | 5,000 (1321) | 15 (20) |
| SE40HF | 5,000 (1321) | 10,000 (2642) | 22 (30) |

* rf = RESIDUAL FAT IN THE SKIM

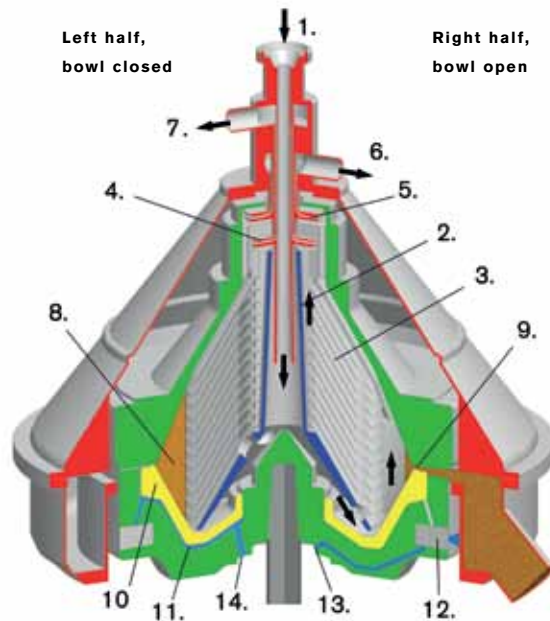

- | | | |
|---------------------------------|-----------------------|--|
| 1. Product inlet | 6. Heavy phase outlet | 11. Water closing chamber |
| 2. Distributor | 7. Light phase outlet | 12. Bowl valve |
| 3. Disk stack | 8. Solids/impurities | 13. Operating water inlet for bowl opening |
| 4. Light phase centripetal pump | 9. Discharge holes | 14. Operating water inlet for bowl closing |
| 5. Heavy phase centripetal pump | 10. Moving ram | |

Self-cleaning milk clarifiers

| MODELS | CLEANING CAPACITY l/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|-------------------------------|---------------------|
| SE11SM | 2,500 (660) | 4 (5) |
| SE11 | 5,000 (1321) | 5.5 (7) |
| SE16 | 8,000 (2113) | 7.5 (10) |
| SE21 | 12,000 (3170) | 15 (20) |
| SE25 | 15,000 (3963) | 18.5 (25) |
| SE31 | 20,000 (5283) | 18.5 (25) |
| SE41 | 25,000 (6604) | 22 (30) |
| SE46 | 30,000 (7925) | 30 (40) |
| SE51 | 40,000 (10567) | 37 (50) |
| SE61 | 50,000 (13209) | 45 (60) |
| SE71 | 65,000 (17172) | 55 (74) |

Automatic milk and cream standardisation

An original system developed by SPX, the Seital Series Se-St automatic standardisation unit employs a highly accurate Coriolis-type meter to provide the density of the cream coming out of the separator. The unit automatically controls separator output parameters such as skim back-pressure and cream concentration and features a touchscreen interface for adjustment of the fat quantity in milk and cream based on recipes set by the operator. The unit is available as a stand-alone module that can be connected to an existing separator or integrated in the same skid of a new separator.



Working range and accuracy:

- Standardised cream: 25-45% fat content
- Cream accuracy: +/- 0.2%
- Standardised milk: from 0.5% up to raw milk fat content - 0.2%
- Milk accuracy: 0.03-0.05%

Capacities

- Milk and cream standardisation: from 5,000 l/h to 50,000 l/h (1321 to 13209 Gal/h)

Milk bacteria clarification

Milk bacterial clarifiers are essentially used to improve quality in drinking milk and cheese production. The general reduction of the amount of bacteria and the important reduction in aerobic spores, anaerobic spores and listeria mean that pasteurisation temperatures can be reduced. Milk bacteria clarification also helps avoid problems during cheese aging, and improves shelf life and organoleptic properties of the milk.

The milk bacteria clarification process can be performed in one of the following ways:

- continuous extraction of bacteria in the concentrated milk flow that must be sterilised before re-use
- extracted concentrate recycling in the feed and bacteria minimization by using only partial discharges

The first method results in minimum milk losses, but requires a more complex and expensive treatment. The second method is the best compromise between installation costs, product quality and milk loss.

Milk bacteria clarifiers

| MODELS | MAXIMUM CAPACITY l/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|------------------------------|---------------------|
| SE155B | 3,000 (793) | 9.2 (12) |
| SE205B | 6,000 (1585) | 15 (20) |
| SE305B | 8,000 (2113) | 15 (20) |
| SE355B | 10,000 (2642) | 18.5 (25) |
| SE405B | 12,000 (3170) | 22 (30) |
| SE455B | 15,000 (3963) | 22 (30) |
| SE505B | 17,000 (4491) | 30 (40) |
| SE605B | 20,000 (5283) | 37 (50) |
| SE705B | 25,000 (6604) | 37 (50) |
| SE755B | 30,000 (7925) | 45 (60) |
| SE805B | 40,000 (10567) | 45 (60) |
| SE855B | 45,000 (11888) | 55 (74) |



Whey processing

Centrifugal separators play a fundamental role in whey processing by recovering fat from whey and/or preparing it for concentration.

Whey clarification

The main purpose of whey clarification is to remove curd fines in order to enable the highest possible efficiency in the subsequent fat separation process. The best way to reduce cheese fines is by using a centrifugal clarifier.

Self-cleaning whey clarifiers

| MODELS | CLEANING CAPACITY I/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|-------------------------------|---------------------|
| SE11SM | 2,500 (660) | 4 (5) |
| SE11 | 5,000 (1321) | 5.5 (7) |
| SE16 | 8,000 (2113) | 7.5 (10) |
| SE21 | 12,000 (3170) | 15 (20) |
| SE25 | 15,000 (3963) | 18.5 (25) |
| SE31 | 20,000 (5283) | 18.5 (25) |
| SE41 | 25,000 (6604) | 22 (30) |
| SE46 | 30,000 (7925) | 30 (40) |
| SE51 | 40,000 (10567) | 37 (50) |
| SE61 | 50,000 (13209) | 45 (60) |
| SE71 | 65,000 (17171) | 55 (74) |

Whey separation

Fat separation from whey is similar to fat separation from milk. Whey contains small amounts of fat, usually between 0.15 and 0.70 %. Fat separation is easier than from milk as long as the quantity of curd fines is low. The processing temperature is usually between 30 and 40°C. (86 and 104°F)

A combination of discharges is usually performed in order to maintain high separation efficiency. Skimming efficiencies between 0.03 and 0.04% residual fat content can be achieved.

Self-cleaning whey separators

| MODELS | SKIMMING CAPACITY I/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|-------------------------------|---------------------|
| SE12A | 2,000 (528) | 4 (5) |
| SE13 | 3,000 (793) | 5.5 (7) |
| SE15 | 5,000 (1321) | 7.5 (10) |
| SE20 | 8,000 (2113) | 11 (15) |
| SE30A | 10,500 (2774) | 15 (20) |
| SE35 | 14,000 (3698) | 18.5 (25) |
| SE40 | 18,000 (4755) | 22 (30) |
| SE45 | 20,000 (5283) | 22 (30) |
| SE50 | 25,000 (6604) | 30 (40) |
| SE60 | 30,000 (7925) | 30 (40) |
| SE70 | 35,000 (9246) | 37 (50) |
| SE75 | 40,000 (10567) | 45 (60) |
| SE75S | 45,000 (11888) | 45 (60) |
| SE80 | 48,000 (12680) | 45 (60) |
| SE85 | 52,000 (13737) | 55 (74) |



Cream and butter oil processing

Cream concentrators

Cream concentration is a common task in the Dairy Industry. Seital Separation Technology offers specific units enabling:

- production of high-fat cream
- minimising of residual fat in the resulting buttermilk

High-fat cream can be the first part of the processing for butter oil production or the starting point for alternative butter production.

Oil purifiers for butter oil concentration and polishing

When mechanical energy is applied to high-fat cream, phase inversion takes place. The cream from a stable milk fat emulsion becomes a mixture of oil and butter serum that can be processed in two stages in order to produce butter oil. The first step is to use an oil purifier to remove as much butter serum as possible from a 70-80% oil concentrate. An oil polisher is then used to produce butter oil ready for vacuum drying.



Self-cleaning cream concentrators

| MODELS | MIN. CAPACITY l/h (Gal/h) | MAX. CAPACITY l/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|------------------------------|------------------------------|------------------------|
| SE12AC | 400 (106) | 600 (159) | 4 (5) |
| SE13C | 500 (132) | 1,000 (264) | 5.5 (7) |
| SE15C | 1,000 (264) | 2,000 (528) | 7.5 (10) |
| SE20C | 1,500 (396) | 2,500 (660) | 11 (15) |
| SE30AC | 2,000 (528) | 3,500 (925) | 15 (20) |
| SE35C | 3,000 (793) | 5,000 (1321) | 18.5 (25) |
| SE40C | 3,500 (925) | 6,000 (1585) | 18.5 (25) |
| SE45C | 4,500 (1189) | 7,500 (1981) | 22 (30) |
| SE50C | 5,000 (1321) | 8,500 (2245) | 30 (40) |
| SE60C | 6,000 (1585) | 10,000 (2642) | 30 (40) |
| SE70C | 7,500 (1981) | 12,500 (3302) | 37 (50) |
| SE75C | 9,000 (2378) | 15,000 (3963) | 37 (50) |
| SE75SC | 10,500 (2774) | 17,500 (4623) | 45 (60) |
| SE80C | 12,000 (3170) | 20,000 (5283) | 45 (60) |
| SE85C | 13,500 (3566) | 22,500 (5944) | 45 (60) |

*Min/max capacities are based on a feed of cream 40%

Self-cleaning butter oil concentrators and purifiers

| MODELS | OIL CONCENTRATION kg/h (lb/h) | OIL PURIFICATION kg/h (lb/h) | MOTOR POWER kW (hp) |
|----------|----------------------------------|---------------------------------|------------------------|
| SE122BO | 750 (1653) | 500 (1102) | 5.5 (7) |
| SE302ABO | 1,500 (3307) | 1,000 (2205) | 11 (15) |
| SE452BO | 3,000 (6614) | 2,000 (4409) | 22 (30) |
| SE602BO | 4,500 (9921) | 3,000 (6614) | 30 (40) |
| SE802BO | 7,000 (15432) | 4,500 (9921) | 45 (60) |

Small dairies

Solid-retaining separators and clarifiers

Solid-retaining (manual cleaning) milk/whey clarifiers, and warm milk and whey skimming separators are also available. The solid impurities present in the product are collected in the internal periphery of the bowl. Solids retaining centrifuges must be stopped and cleaned manually at the end of the production shift.

Solid-retaining milk and whey clarifiers

| MODELS | CLEANING CAPACITY l/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|----------------------------------|------------------------|
| SE03.1 | 1,500 (396) | 1.5 (2) |
| SE05.1 | 3,000 (793) | 1.85 (2.4) |
| SE06.1 | 4,500 (1189) | 4 (5) |
| SE07.1 | 6,000 (1585) | 5.5 (7) |
| SE09.1 | 7,500 (1981) | 7.5 (10) |

Solid-retaining milk and whey separators

| MODELS | MILK SKIMMING CAPACITY l/h (Gal/h) | WHEY SKIMMING CAPACITY l/h (Gal/h) | MOTOR POWER kW (hp) |
|--------|---------------------------------------|---------------------------------------|------------------------|
| SE03.0 | 750 (198) | 1,050 (277) | 1.5 (2) |
| SE05 | 1,200 (317) | 1,800 (476) | 1.85 (2.4) |
| SE06 | 2,000 (528) | 3,000 (793) | 4 (5) |
| SE07 | 3,000 (793) | 4,500 (1189) | 5.5 (7) |
| SE09 | 5,000 (1321) | 7,500 (1981) | 7.5 (10) |

Quality and safety

SPX manufactures all performance-critical components including machining the bowls and parts that define separation efficiency, quality and safety at its facility in Santorso. All components are manufactured according to internal fabrication standards, many of which exceed those laid down by code requirements for non-destructive testing.

Materials

Centrifuge components are precision-made using the highest quality stainless steel, special alloys, titanium and other high-grade materials. Our engineering specialists at our Santorso factory possess a complete range of design, manufacturing and assembly expertise.

Quality engineering and control

- Optimisation of structural and dynamic design using advanced design technology
- Optimisation of product fluid-dynamic through new vertical disk stack design
- Cutting-edge manufacturing and quality control systems

Service and support for maximum output

- Maintenance and troubleshooting – to avoid costly downtime
- Rapid delivery of original spare parts – reliability for longer service life
- Remote monitoring – fast problem solving



Dynapumps®

Contact us Australia-wide

- ☎ 1300 788 579
- ✉ sales@dynapumps.com.au
- 🌐 www.dynapumps.com.au

For more information and to request a quote, contact one of the Dynapumps offices:

Western Australia

3 Freight Road,
Kenwick, WA 6107
Phone: +61 8 9424 2000

Queensland

33 Homestead Drive,
Stapylton, QLD 4207
Phone: +61 7 5546 7777

Concepcion

Camino Los Carros 1955,
Bodega 10, Modulo 2,
“Megacentro Los Carros”
Comuna de Concepcion. Chile

South Australia

Unit 2/6 Kitawah Street,
Lonsdale, SA 5160
Phone: +61 8 8326 5056

Santiago

Nueva Tajamar 481, Torre
Norte, WTC, Oficina 2004,
Las Condes, Santiago, Chile

Antofagasta

Juan Gutemberg 438,
Antofagasta, Chile

Victoria

10 Trafalgar Road,
Epping, VIC 3076
Phone: +61 3 9464 3039

Panama

PanAmerica Corporate Center
Galera 9123 Local 11, Ciudad
de Panama, Panama